

Disassemble valve, including vent stem, if the valve is installed during welding.