

If the valve is installed during welding, disassemble prior to welding.